

Instruction

Car Battery Monitor

Functional Description

During engine started

1. Batter Charged (Normal)= Display one by one from 1st to 3rd digits (13.1V ~ 15.9 v)
2. Battery No Charge (abnormal)= Display voltage value for all digits and after about 5 seconds, display blinking (11.6V ~13.0V)
3. Battery No Charge (Low) Display '00' and 'Lo' alternatively (Below 11.6V)
4. Battery Over Charged (High)= Display '-' and HI alternatively (Above 16.0V).

NOTE 1: It is OK if item 2 sometimes appear then back to item 1. But, must check the battery if item 2 always appears and never back to item 1.

NOTE 2: Must check the battery when items 3 or 4 appear.

Switch On but engine not start

1. Battery No Charge (Normal)= Display certain value for all digits and after 5 seconds, display blinking (11.6V~13.0 V).
2. Battery No Charge (Low)= Display '00' and 'Lo' alternatively (Below 11.6V).

NOTE: Must check the battery when item 2 appear.

Good, Warning or Bad condition

During engine started

Good= Display 13.1~ 15.9

Warning= 11.6V ~13.0 (must check battery if always appear this value)

NOTE: IT is ok if display able to go back to good condition.

Bad= Below 11.6V or above 16.0V (Must check battery)

Switch On but engine not start

Good= Display 11.6~13.0

Bad= Below 11.6V (Must check battery)